



Read the instructions and warnings in this manual before using this firearm!!!

					•												•																							
•	•																•																							
•	•																•																							•
•	•																•																							•
•	•																•																							
																2																								
														1		•	R	1998	889		89 20																			
				•	•	+]					F .		G	11		ſ	9			-																	
		111										E	\geq	*	100			D.		0			5			-(*		-											
		100							·	/			Ŕ) Y			I		1			Ą		AAAA	AAAAA	DOAnn	RAR	•	Thi				((3			
		000	· -			·	-					1					•						•	zaáda			UUUU					•		$\overline{7}$		-) e		
		F	Ŀ	1										J .			•														9.	•	÷	1			鈏			
												Ľ					•																							
																	•																							
																	•																							
																					•																			
													SIE	RR	AD	EF	ENS	SE	CO	RV	ETT	ER	ECO	ЭМІ	ME	NDA	АТІС	ONS												
																	•																							
																	•																							
																								d 3′																
								-• V	Ve	sug	ge	st t	o u															ora	nd	am	mu	niti	on.							•
																								รษฐ																
							-	100	ro	unc	ls c																			ill c	ycl	e·li	ght	er					•	
												loo	ads	We	ell c	fte	er c	on	nple	ətir	ng t	he	pro	per	br	eak	(in	per	iod										1	
																	•																						1	
																	•																						1	
																	•																			•	•	•	÷	
																	•																							

INTRODUCTION TO Sierra Defense INDUSTRIES

Sierra Defense Industries has been associated with the top class manufacturers in the firearms industry and is now exporting firearms to 45 different countries. All firearms are subjected to C.I.P., SAAMI and TSE testing which ensures the highest quality firearms and an emphasis on safety. Traditional craftsmanship paired with modern technology has resulted in some of the finest firearms on the market today.

Sierra Defense Industries has built itself around its core philosophy: THE BEST OR NOTHING an emphasis on research and revelopment has led to multiple patents as well as stunning and innovative design. We are driven by a continued commitment to design that leads the industry.

QUALITY CERTIFICATES: ISO 9001:2008 Certificate
European Quality Assurance Certificate
Turkish Standards Intitution Certificate
BÁSIC SÁFTEY RULES
1. NEVER POINT A FIREARM AT SOMETHING THAT IS NOT SAFE TO SHOOT.
Never let the muzzle of a firearm point at any part of your body or at another person. This is
especially important when loading or unloading the firearm. When you are shooting at a target, know what is behind it. Some bullets can travel over a mile. If you miss your target or if the bullet
penetrates the target, it is your responsibility to ensure that the shot does not cause unintended
injury or damage.
2. ALWAYS TREAT A FIREARM AS IF IT WERE LOADED. Never assume that a firearm is unloaded. The only certain way to ensure that a firearm has the chamber empty is to open the chamber and visually and physically examine the inside to see if a round is present. Removing or unloading the magazine will not guarantee that a firearm is unloaded or can not fire. Shot- guns and rifles can be checked by removing all rounds and by then opening and inspecting the chamber for a visual inspection of the chamber for any remaining rounds.
3. STORE YOUR FIREARM SO THAT CHILDREN CAN NOT GAIN ACCESS TO IT. It is your responsibility to ensure that children under the age of 18 or other unauthorized persons do not gain access to your firearm. To reduce the risk of accidents involving children, unload your firearm, lock it and store the ammunition in a separate locked location.

· · · · · · · · · · · · · · · · · · ·									
Please note that devices intended to prevent accidents - for example, cable locks, chamber p use or misuse of your . Firearm storage in a steel gun safe may be more appropriate to reduce misuse of a firearm by an unauthorized child or person.									
4. NEVER SHOOT AT WATER OR AT A HARD SURFACE. Shooting at the surface of water or at a rock or other hard surface increases the chance of ricochets or fragmentation of the bullet or shot, which can result in the projectile striking an unintended or peripheral target.									
5. KNOW THE SAFETY FEATURES OF THE FIREARM YOU ARE USING, BUT REMEMBER: SAFETY DEVICES ARE NOT A SUBSTITUTE FOR SAFE HANDLING PROCEDURES. Never rely solely on a safety device to prevent an accident. It is imperative that you know and use the safety features of the particular firearm you are handling, but accidents can best be prevented by following the safe handling procedures described in these safety rules and elsewhere in the product manual. To further familiarize yourself with the proper use of this or other firearms, take a Firearms Safety Course taught by an expert in firearms use and safety procedures.									
6. PROPERLY MAINTAIN YOUR FIREARM. Store and carry your firearm so that dirt or lint does not accumulate in the working parts. Clear and oil your firearm, following the instructions provided in this manual, after each use to prever corrosion, damage to the barrel or accumulation of impurities which can prevent use of the g an emergency. Before loading your firearm, always check the barrel internal part and the char to ensure that they are clean and free from obstructions. Firing with an obstruction in the barr the barrel and injure you or others nearby. In the event you hear an unusual noise when shoot engage the manual safety and unload the firearm. Make sure the chamber and barrel are free a bullet blocked inside the barrel due to defective or improper ammunition.	ent un mb rel ing	oer or o , sto	chc op f	firin	g in	nm	edi	ate	ly,
					. —				

7. USE PROPER AMMUNITION.

Only use factory loaded, new ammunition manufactured to industry specifications: CIP (Europe and elsewhere), SAAMI® (U.S.A.). Be certain that each round you use is in the proper caliber or gauge and type for the particular firearm. The caliber or gauge of the firearm is clearly marked on the barrels of shotguns and on the slide or barrel of pistols. The use of reloaded or remanufactured ammunition can increase the likelihood of excessive cartridge pressures, case head ruptures or other defects in the ammunition that can cause damage to your firearm and injury to yourself or others nearby.

8. ALWAYS WEAR PROTECTIVE GLASSES AND EARPLUGS WHEN SHOOTING.

The chance that gas, gunpowder or metal fragments will blow back and injure a shooter who is firing a gun is rare, but the injury that can be sustained in such circumstances can be severe, including the possible loss of eye sight. A shooter must always wear impact resistant shooting glasses when firing any firearm. Earplugs or other high quality hearing protectors help reduce the chance of hearing damage from shooting.

9. NEVER CLIMB A TREE, FENCE OR OBSTRUCTION WITH A LOADED FIREARM.

Open and empty the chamber of your firearm and engage the manual safety catch before climbing or descending a tree or before climbing a fence or jumping over a ditch or other obstruction. Never pull or push a loaded firearm toward yourself or another person. Always unload the firearm, visually and physically check to see that the magazine, loading mechanism and chamber are unloaded and that the bolt is open before handing the firearm to another person. Never take a firearm from another person unless it is unloaded, visually and physically checked to confirm it is unloaded, and the action is open.

10. AVOID ALCOHOLIC BEVERAGES OR JUDGEMENT/REFLEX IMPAIRING MEDICATION WHEN SHOOTING.

Do not drink alcohol and shoot. If you take medication that can impair motor reactions or judgment, do not handle a firearm while you are under the influence of the medication.


11. NEVER TRANSPORT A LOADED FIREARM.								
Always unload your firearm before transporting.								

WE SPECIFICALLY DISCLAIM ANY RESPONSIBILITY FOR DAMAGE OR INJURY OCCURRING IN CONNECTION WITH, OR AS A RESULT OF THE USE OF FAULTY, OR "REMANUFACTURED," OR HAND-LOADED(RELOADED) AMMUNITION. ADDITIONALLY, WE DISCLAIM ANY RESPONSIBILITY FOR DAMAGE OR INJURY WHICH RESULTS FROM ANY MODIFICATIONS OR CHANGES THAT ARE NOT A PART OF THE FIREARM AS DELIVERED FROM THE FACTORY.

CONGRATULATIONS!!!

Learn to clean your firearm thoroughly and make certain no oil, grease or other materials are blocking the barrel. Obstructions of any kind can cause damage to the firearm, and may result in serious personal injury to the shooter and/or others nearby. Practice proper firearm maintenance and safety. Make sure all exposed metal surfaces are coated with a thin film of oil, especially after exposure to damp weather. (See proper section of this manual for cleaning instructions. Do not plug barrel or store in a fabric-lined case which will absorb lubricants from the firearm. A Before using after storage, follow complete instructions stated in this manual to refamiliarize with the firearm. A thorough inspection should be performed before going into the field. Have your firearm periodically checked by a qualified gunsmith. You are now the owner of the Sierra Defense CORVETTE SEMI AUTOMATIC 12 gauge shotgun. Your shotgun has an innovative design and is manufactured from high quality materials. With regularly performed maintenance and the use of proper ammunition it will provide you with many years of service. In order to achieve the best peformance and reliability from your shotgun, please read and fully understand all of the instructions, safety guidelines, and warnings carefully in this manual. Your shotgun is reliable and safe unless it is handled in a careless or irresponsible manner.

REMEMBER: it is imperative that the firearm handler be fully educated and conscious of the importance of executing proper gun safety rules when operating any firearm. Before using or firing with any live ammunition you should know and fully understand your shotgun's parts, function, and operating mechanisms. So carefully read and fully understand all of the information about the parts and procedures of using the shotgun safely and effectively.

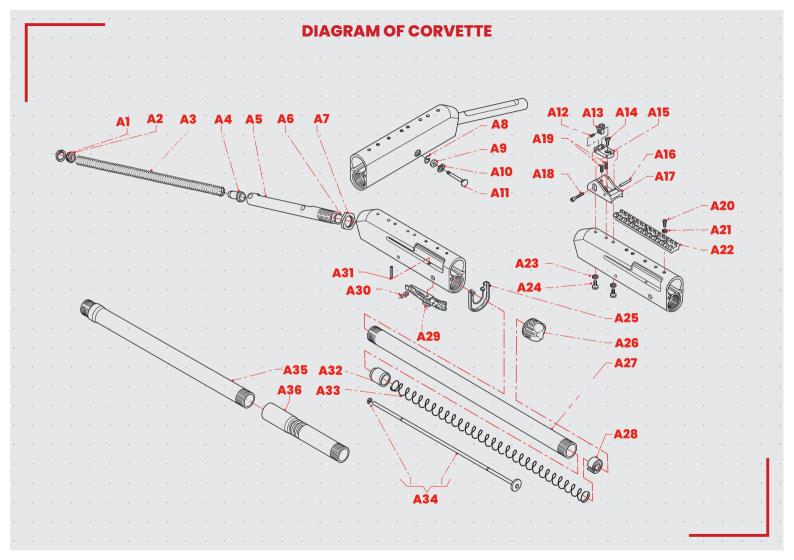

		• • •																							
	Al	ST		RETAI	INING	PIN					A19)	El	EVA	TION	I SPI	RING	S							
	A2	S	TOCK	RETA	INING	SCI	REW				A2()	R	EAL N	NON	NT S	SCR	EW							
	A3	RE	COILS	SPRIN	IG						A2	1	RA	AIL W	ASH	IER									
	A4	R	ECOIL	SPRI	NG P	LUNG	€R				A22	2	Pl	CATI	NNY	RAI	L								
	A5	RI	ECOIL	SPRI	NG TI	JBE					A23	3	R	EAR	SIGF	IT W	/ASF	IER							
	A6	FL	EXIBLE	RINC	Э						A24	4	F	EAR	SIG	HT №	10U	NT S	SCR	EW					
	Α7	TI	JBE RE	TAIN	ER NI	JT					A2	5	H	IAND	GU	ARD	RET	AIN	ING	BA	ND				
	A8	T.	G.P RE	TAIN	ING S	PRIN	IG				A2	6	M	AGA	ZINE	CAI	>								
	A9	Τ.	G.P RE	TAIN	ING S	SPAC	ER				A2	7	М	AGA	ZINE	TUE	3E								
	A10	Т.(G.P RE	TAINI	NG R	ING					A2	8	1	MAG.	AZIN	E SF	PRIN	g se	AL	RIN	G				
	A11	TR	RIGGEF	۲GU	ARD F	PIN					A2	9	SI	HELL	STO	Р									
	A12	۷	VINDA	GE A	DJUS	STME	NT S	CRE	W		A3	0	S	HELL	STC	P SI	PRIN	IG							
•	A13	R	EAR S	IGHT	APER	TUR	E			•	A3	1	S	HELL	STO	P PI	N								
•	A14	E	LEVAT	ION /	ADJU	ISTM	ENT	SCR	EW		A3	2	S	HELL	FOL	LOW	/ER						•	•	
	A15	EL	EVATI	ON P	LATFO	ORM					A3	3	Μ	AGA	ZINE	SPF	RING	;							
	A16	RE	AR SI	GHT	PIN						A3	4	PLI	JG											
	A17		EAR SI								A3	-	M	AGA	ZINE	TUE	3E								
	A18	V	VINDA	ige a	DJUS	STME	NT S	CRE	W		A3	6	N	1AG/	ZIN	e tu	BE F	IXEF	2						


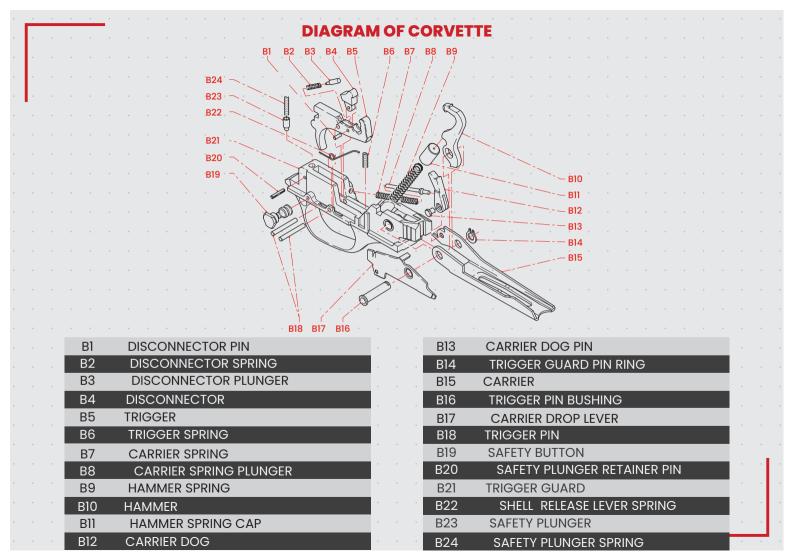


DIAGRAM OF CORVETTE	
D1 HAND GUARD D2 FRONT SIGHT POST D3 FRONT SIGHT PROTECTION GUARD D4 CHOKE TUBE D5 CAP RETAINING PING D6 CAP RETAINING SPRING	 • •
D1 HAND GUARD D2 FRONT SIGHT POST D3 FRONT SIGHT PROTECTION GUARD D4 CHOKE TUBE D5 CAP RETAINING PING D6 CAP RETAINING SPRING	 • •
D1 HAND GUARD D2 FRONT SIGHT POST D3 FRONT SIGHT PROTECTION GUARD D4 CHOKE TUBE D5 CAP RETAINING PING D6 CAP RETAINING SPRING	 • •
D2 <td< th=""><th> </th></td<>	
DI HAND GUARD DI HAND GUARD DI HAND GUARD DI FRONT SIGHT POST DI SIGHT POST DI GAS PLUG SPACER DI GAS PLUG SPACER	
D20D1D1D1D2D1D1D2D1D1D2D1D1D2D1D1D2D1D1D2D1D1D2D1D1D2D1D1D2D1D1D2D1D1D2D1D2D1D2D1D2D1D2D2D1D2D2D2D1D3FRONT SIGHT PROTECTION GUARDD13GAS PLUG SPRINGD16D17GAS PLUGD18GAS PLUG O RING	
DisDisDifDisDisDifDisCAP RETAINING PINGDisCAP RETAINING SPRINGDisDisGAS PLUG O RINGDisDisGAS PLUG O RING	
DIHAND GUARDDI3GAS PLUG SPACERD1HAND GUARDDI3GAS PLUG SPACERD2FRONT SIGHT POSTDI4GAS PLUG SPRINGD3FRONT SIGHT PROTECTION GUARDDI5GAS PLUG CAPD4CHOKE TUBEDI6GAS PLUG PIND5CAP RETAINING PINGDI7GAS PLUG O RINGD6CAP RETAINING SPRINGDI8GAS PLUG O RING	
DI HAND GUARD DI HAND GUARD DI TRONT SIGHT POST DI FRONT SIGHT PROTECTION GUARD DI CHOKE TUBE D5 CAP RETAINING PING D6 CAP RETAINING SPRING D18 GAS PLUG O RING	
DI HAND GUARD DI HAND GUARD DI TRONT SIGHT POST DI FRONT SIGHT PROTECTION GUARD DI CHOKE TUBE D5 CAP RETAINING PING D6 CAP RETAINING SPRING D18 GAS PLUG O RING	
DI HAND GUARD DI HAND GUARD DI TRONT SIGHT POST DI FRONT SIGHT PROTECTION GUARD DI CHOKE TUBE D5 CAP RETAINING PING D6 CAP RETAINING SPRING D18 GAS PLUG O RING	
D1 HAND GUARD D2 D1 D10 D9 D8 D7 D6 D5 D4 D12 D1 D10 D9 D8 D7 D6 D5 D4 D13 GAS PLUG SPACER D14 GAS PLUG SPRING D14 GAS PLUG SPRING D15 GAS PLUG CAP D16 GAS PLUG CAP D16 GAS PLUG PIN D17 GAS PLUG O RING D18 GAS PLUG O RING	
D1D12D10D9D8D7D6D5D4D1HAND GUARDD13GAS PLUG SPACERD2FRONT SIGHT POSTD14GAS PLUG SPRINGD3FRONT SIGHT PROTECTION GUARDD15GAS PLUG CAPD4CHOKE TUBED16GAS PLUG PIND5CAP RETAINING PINGD17GAS PLUG O RINGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D1D12D10D9D8D7D6D5D4D1HAND GUARDD13GAS PLUG SPACERD2FRONT SIGHT POSTD14GAS PLUG SPRINGD3FRONT SIGHT PROTECTION GUARDD15GAS PLUG CAPD4CHOKE TUBED16GAS PLUG PIND5CAP RETAINING PINGD17GAS PLUG O RINGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D1HAND GUARDD13GAS PLUG SPACERD2FRONT SIGHT POSTD14GAS PLUG SPRINGD3FRONT SIGHT PROTECTION GUARDD15GAS PLUG CAPD4CHOKE TUBED16GAS PLUG PIND5CAP RETAINING PINGD17GAS PLUG O RINGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D2FRONT SIGHT POSTD14GAS PLUG SPRINGD3FRONT SIGHT PROTECTION GUARDD15GAS PLUG CAPD4CHOKE TUBED16GAS PLUG PIND5CAP RETAINING PINGD17GAS PLUG O RINGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D2FRONT SIGHT POSTD14GAS PLUG SPRINGD3FRONT SIGHT PROTECTION GUARDD15GAS PLUG CAPD4CHOKE TUBED16GAS PLUG PIND5CAP RETAINING PINGD17GAS PLUG O RINGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D3FRONT SIGHT PROTECTION GUARDD15GAS PLUG CAPD4CHOKE TUBED16GAS PLUG PIND5CAP RETAINING PINGD17GAS PLUGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D4CHOKE TUBED16GAS PLUG PIND5CAP RETAINING PINGD17GAS PLUGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D5CAP RETAINING PINGD17GAS PLUGD6CAP RETAINING SPRINGD18GAS PLUG O RING	
D6 CAP RETAINING SPRING D18 GAS PLUG O RING	
D7 FRONT SIGHT RETAINING NUT D19 GAS PISTON	
D8 SLING PLATE RETAINER D20 EJECTOR RETAINING RIVET	
D9 SLING ATTACHMENT PLATE D21 EJECTOR SPRING RETAINER PIN	
D10 SPRING WASHER D22 EJECTOR HOUSING	
D11 WASHER D23 EJECTOR	
D12 RETAINING RING D24 EJECTOR SPRING	

· · · · · · · · · · · · · · · · · · ·		
		E3 E4 E5
Open ()		EI5
C5		
		E14 E13
		E1 FIRING PIN
C7		E2 FIRING PIN SPRING
C4 C3		E3 BOLT LINK
C2 C1	• • •	E4 BOLT LINK PIN
	• • •	E5 BOLT
		E6 CHARGING HANDLE DETENT
CI STOCK		E7 CHARGING HANDLE DETENT SPRING
C2 STOCK RETAINING PLATE		E8 CHARGING HANDLE SPRING RETAINING PIN
C3 STOCK RETAINING PLATE WASHER	• • •	E9 EXTRACTOR PIN
C4 STOCK RETAINING SCREW	• • •	E10 EXTRACTOR
C5 STOCK RETAINING PLATE		E11 EXTRACTOR SPRING
C6 RECOIL PAD SCREW		E12 BOLT HEAD
C7 RUBBERIZED PISTOL GRIP		E13 LOCKING HEAD PIN
		E14 CHARGING HANDLE
		E15 FIRING PIN RETAINING



other issues. Short forcing cones lead to excess gas pressure in the barrel and can lead to damage.

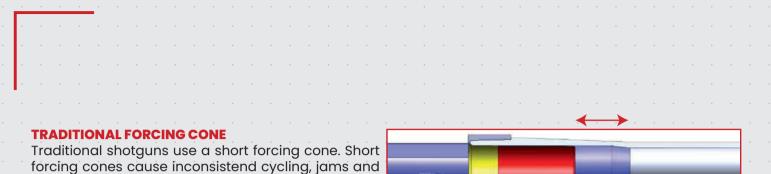

CORVETTE FORCING CONE

The Corvette forcing cone is an elongated design and provides 6% less recoil. It also reduces muzzle rise by evenly dispersing the gas inside the barrel.



DISASSEMBLY




1- Unscrew the magazine cap. (fig. 1)




2- Pull the barrel slightly out of the receiver then separate and remove the handguard. (fig. 2)




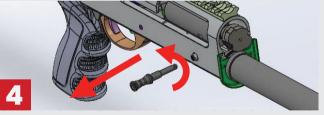


3-	Re	mo	ve	the	ba	rrel	fro	m tl	he i	rece	eive	er. (1	fig.	3)			4- pi	· Re ullin	mo a o	ve ut t	the he	cho cho	arg argi	ing ng l	har har	ndle ndle	ebγ . (fi	/ tw a. 4	ristir .)	ng d	and		
																	•		0,				Ŷ	Ŷ				U ,	· · ·				

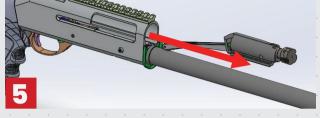

5- Remove the bolt from the receiver. (fig. 5)

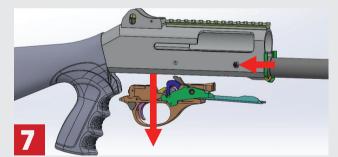


7- Push and hold down the bolt release button, then pull the fire control group out of the bottom of the receiver. (fig. 7)

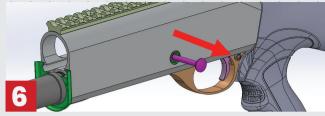


6- To remove the fire control group, start by punching out the fire control group retention pin. (fig. 6)


Your shotgun is now ready for easy cleaning and maintenance. Your gun normally cleans its gas system automatically and we do not suggest to disassemble gas system of your gun!!! If you need to clean your gas system you can follow the steps below.

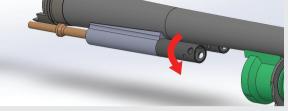


8-To remove the gas cylinder plugs, take a punch and turn them counterclockwise until you can finish removing them by hand. (fig. 8)

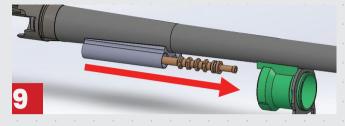

9- Using your hand, hand push the gas piston out the front side of the housing. (fig. 9)

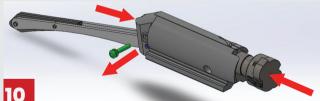

10- To disassemble the bolt, locate the head of the firing pin at the rear of the bolt and cover it with your finger. Then with another finger push in the locking head of the bolt. While holding both simultaneously, remove the firing pin retaining pin. (fig. 10)

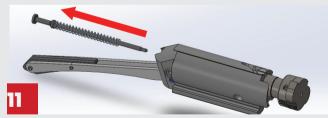

11- Slowly ease your finger back off of the firing pin. The firing pin is under spring tension so gently back off of it until the tension is gone. Then remove the firing pin and firing pin spring out of the back of the bolt. (fig. 1)

																					• •																• •
																					• •																• •
																																					• •
																																					• •
• •																					• •																
• •																																					• •
																				•	• •																• •
• •		2						/	~											1	13		3														• •
					0	THE	5					0	ò							•																	
• •			2	-		\bigcirc							-	~)						F	TE					-	2									• •
• •		•																				the	Ø				•/										• •
• •		U	F																		,			2								_	0				• •
	14	о_ т		th.			N/OF	an	d	lum			-bo		kin	a b		•		•	13-D	amo		the		kinc	r be	add	by	nul	lling	n it r		of	o		• •
• •	1: r	2- 1 eta	urr	n the	e bo	olt c Hav	over e th	an ne p	d d bin	lum in t	ip o he	out t rea	the r of	loc f th	king	g h :hai	ead	• • •	•	· ·	13-Ri bolt.	emc (fig.	ove 1 . 13)	the	loc	king	g he	ead	by	pul	llinç	g it	out	of	the		· ·
· ·	r	eta	inin	g p	e bo bin. I pinç	lav	e th	ne, p	Din	in, t	he	rea	r of	f th	e, c	har	ead nnel			· ·	13-Ri bolt.	əmc (fig.	ove t . 13)	the	loc	king	g he	ead	by	pul	llinç	g it	out	of [•]	the		· ·
· · ·	r	eta	inin	g p	in. I	lav	e th	ne, p	Din	in, t	he	rea	r of	f th	e, c	har	ead nnel			•	I3-Ri bolt.	emc (fig.	ove 1 . 13)	the	loc	kinç	g he	ead	by	pul	llinç	g it	out	of [•]	the	•	· · ·
· · ·	r	eta	inin	g p	in. I	lav	e th	ne, p	Din	in, t	he	rea	r of	f th	e, c	har	ead nnel	• • • • •		•	I3-Ri bolt.	emc (fig.	ove t . 13)	the		kinç	g he	ead	by	pul	llinç	g it	out	of i	the		· · ·
· · ·	r	eta	inin	g p	in. I	lav	e th it sc	ne p o it c	oin can	in t be	he ren	rea nov	r of ed.	f th (fic	e c g. 12	:har 2)	nnel	I .	sem		I3-Ribolt.										llinç	g it i	out	of T	the		· · · · · · · · · · · · · · · · · · ·
· · ·	r	eta	inin	g p	in. I	lav	e th it sc	ne p o it c	oin can	in t be	he ren	rea nov	r of ed.	f th (fic	e c g. 12	:har 2)	nnel	I .	sem		· ·										llinç	g it	out	of [•]	the		· · · · · · · · · · · · · · · · · · ·
	r	eta	inin	g p	in. I	lav	e th it sc	ne p o it c	oin can	in t be	he ren	rea nov	r of ed.	f th (fic	e c g. 12	:har 2)	nnel	I .	sem		· ·										llinç	g it i	out	of ·	the		
	r	eta	inin	g p	in. I	lav	e th it sc	ne p o it c	oin can	in t be	he ren	rea nov	r of ed.	f th (fic	e c g. 12	:har 2)	nnel	I .	sem		· ·										Ilinç	g it i	out	of	the		
	r	eta	inin	g p	in. I	lav	e th it sc	ne p o it c	oin can	in t be	he ren	rea nov	r of ed.	f th (fic	e c g. 12	:har 2)	nnel	I .	sem		· ·										llinç	g it i	out	of ¹	the		
	r	eta	inin	g p	in. I	lav	e th it sc	ne p o it c	oin can	in t be	he ren	rea nov	r of ed.	f th (fic	e c g. 12	:har 2)	nnel	I .	sem		· ·										Ilinç	g it (out	of [•]	the		







14- To assemble the bolt, insert the locking head into the bolt making sure to line up the hole in the locking head with the end of the channel in the bolt. (fig. 14)




16- Take the firing pin spring and place it over the firing pin. (fig. 16)

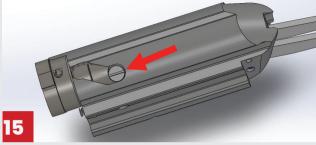


15- Insert the locking head retaining pin so that the line in the head of the pin is parallel with the bolt to allow a clear path for the firing pin. (fig. 15)

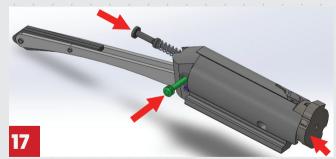


17- While holding the locking head into the bolt insert the firing pin and hold it flush with the back of the bolt. While holding the firing pin and locking head simultaneously, insert the firing pin retaining pin. (fig. 17)

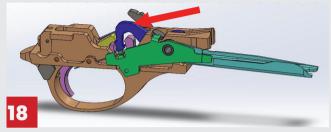


18- Take the fire control group and make sure the hammer is cocked with the safety on. (fig. 18)

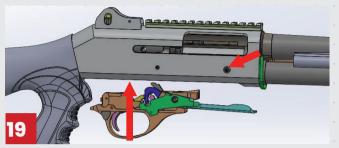

19- While holding the bolt release button, insert the fire control group into the shotgun and ensure the hole in the fire control group is lined up with the hole in the receiver. (fig. 19)

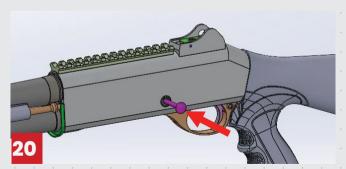


20- Insert the fire control group retaining pin.(fig. 20)

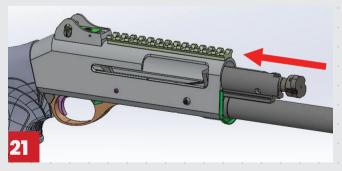

21- Insert the bolt by sliding it along the rails of the receiver. (fig. 21)


If you disassembled gas system of your gun you can reassemble the system by following the Figure 18 and Figure 19-

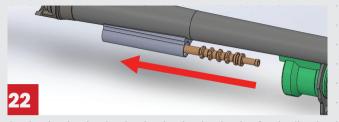

22-Insert the gas piston into the housing. (fig. 22)



23- Take the gas cylinder plugs and screw them in clockwise by hand. Then take a punch and tighten to a snug fit. (fig. 23)

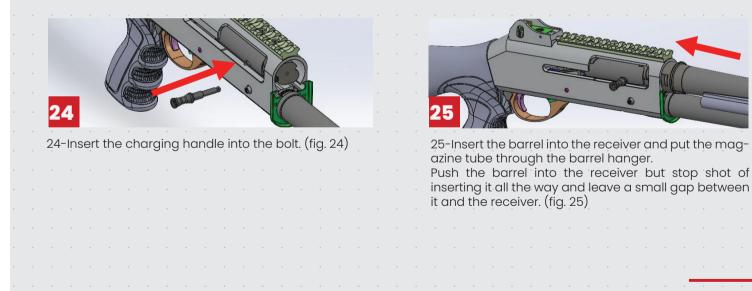

	Ċ,		•																																
•	1																																		
•	1																					•													
•	÷.,																					•													
	н. С																					•													
			~	•						_																				_					
			6		AL AL AL	20.025	62626	ESESEC																						R	2				
		F		Ges	- 19	5	a	70-	-				(-							T							-)			
		×			•		0			67	66666	66666	86666			n-da	7												7	-	'n		(F	O.	
	•		RAC				-0	-	₹				i ni hi		H						<u>I</u>		1	-		-	-	-			U	1		5	• •
•		26	6													6				27	7														
•		26														6				27			-												
•		26-	· Ta	ke th	ne tv	vo ł	nan	dgı	Jara	d pi	ece	es a	ind	ins	ert	the	m					har	d sc	rew	ı do	wn	and	ditic	ghte	en t	he	'n	nag	ja-	
•		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh	the	bc	ert arre	thei I.ar	m nd					har ap u	d sc ntil.it	rew t is s	/ do snuę	own g. (f	ana ig. 2	d tig 27)	ghte	ən t	he	• m	nag	ja-	
•		26- into	· Ta D. th	ke th e re guaro	taini	ing	bai	nds	s. "Th	nen	pu	sh	the	bc	ert arre	thei I.ar	m nd					har ap u	d sc ntil i	rew t is s	ı do snuç	own g. (f	ana ig. 2	d tiç 27)	ghte	en t	he	r N	nag	ja-	
•		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh	the	bc	ert arre	thei I ar	m nd					har ap u	d sc ntil if	rew t is s	r do snuç	own g. (f	ana ig. 2	d tiç 27)	ghte	en t	he	° m •	nag	Ja-	
•		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh	the	bc	ert arre	thei I ar	m nd					har ap u	d sc ntil i	rew t is s	/ do snu(own g. (f	ana ig. 2	d tiç 27)	ghte	en t	he		nag	Ja-	
•		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh	the	bc	ert arre	thei I ar	m nd					har ap u	d sc ntil i	rew t is s	r do snuç	own g. (f	ana ig. 2	d tiç 27)	ghte	en t	he		nag	- - - Ja-	
		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh	the	bc	ert arre	thei I ar	m nd					har ap u	d sc ntil ii	rew t is s	/ do snuç	own g. (f	and ig. 2	d tiç 27)	ghte	en t	he		nag	Ja-	
		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh (fi	the g. 2	bc 6)	arre	l ar	nd .			27- zin -	- By	· · ·		rew t is s	/ do snuç	wn g. (f	and ig. 2	d tig 27)	ghte	ən t	he	• m	nag	- - - - - - - - - - - - - - - - - - -	
		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh (fi	the g. 2	bc 6)	arre	l ar	nd .	com	plet	27- zin -	- By	· · ·		t is s	ı do	own g. (f	and ig. 2	d tiç 27)	jhte	en t	he	m	nag	JQ-	
		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh (fi	the g. 2	bc 6)	arre	l ar	nd .	com	plet	27- zin -	- By	· · ·		erew t is s	/ do	own g. (f	and ig. 2	d tiç 27)	ghte	en t	he	• m	nag	ja-	
		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh (fi	the g. 2	bc 6)	arre	l ar	nd .	com	ple	27- zin -	- By	· · ·		rew is s	/ do	wn g. (f	and ig. 2	d tiç 27)	yhte	en t	he	• m	nag	jα-	
		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh (fi	the g. 2	bc 6)	arre	l ar	nd .	com	plet	27- zin -	- By	· · ·		t is s	ı do	own g. (f	and ig. 2	d tiç 27)	ghte	en t	he	• m	nag	JQ-	· · · · · · · · · · · · · · · · · · ·
		26- into	· Ta D. th	e re	taini	ing	bai	nds	s. "Th	nen	pu	sh (fi	the g. 2	bc 6)	arre	l ar	nd .		plei	27- zin -	- By	· · ·		erew t is s	/ do	own g. (f	and ig. 2	d tiç 27)	yhte	en t	he	• m	nag	ja-	

· · · · · · · · · · · · ·	•••••	(PES AND BENEFIC nooting slugs or bucksl		5 choke.
СНОКЕ ТУРЕ	SYMBOL	IDEAL GAME	PELLET SIZE	USEFUL SHOOTING DISTANCE
* 1 FULL	\bigcirc	Goose, Duck, Wood Grouse. For long range hunting with lead shot and tight groups	1-2-3	55-65 Yards (50-60 Metres)
** 2 IMPROVED MODIFIED	\bigcirc	Duck, Pheasant, Wood Grouse, Rabbit	4-5-6	45-50 Yards (41-44 Metres)
*** 3 MODIFIED		Partridge, Pheas- ant,Ouail, Pigeons,Wood- cock For long range hunting with lead shot and tight groups.	5-6-7-8	38-43 Yards (35-41 Metres)
**** 4 IMPROVED CYLINDER	\bigcirc	Ouail, Dove and target shooting For shooter distance more open shooting	7-8-9-10 -11-12	32-38 Yards (30-35 Metres)
***** 5 CYLINDER	\bigcirc	For sporting clay and skeet shooting. Short distances more open shooting.	7-8-9-10 -11-12	22-32 Yards (20-30 Metres)
	WARNING: MPX	includes number 1-3-	-5 mobile choke in	box.

MAINTENANCE AND CLEANING

LUBRICATION WARNING: Firing a shotgun with oil, grease, or other debris partially obstructing the bore may result in damage to the firearm or injury to the shooter and those nearby. Before firing make sure the bore and chamber of the barrel is unobstructed and dry. Never spray or apply lubricant on shotshells. Firing another shotshell behind an obstruction may damage the shotgun and cause death or injury. Only use lubricants properly and sparingly. You are responsible for the proper care and maintenance of your shotgun.

1. Disassemble your shotgun.

2.Using a proper cleaning rod, run a solvent-wetted patch through the bore several times. This will then be followed by running dry patches through the bore to remove any debris or residue.

3.If the bore is leaded to the extent that the above patch cleaning procedure did not remove the lead. then scrub the bore full length with a solvent-wetted brass bristle brush. When the leading is loose then repeat step #2.

4.The surfaces the bolt carrier, ejector and inside surfaces of the receiver should be coated very lightly with non-penetrating lubricating oil.

5.Reassemble the shotgun and wipe the exterior metal surfaces sparingly with an oiled cloth. Swab the bore with an oily patch before storing the firearm.

6.Place the shotgun in a safe, locked storage space where unauthorized persons cannot access the firearm. Never store the shotgun in a leather case as leather attracts moisture even though it may appear dry.

7.Never fire your gun without choke tubes snuggly tightened in barrels. Do not over tighten choke tubes. Wipe all exposed metal surfaces with an oiled cloth befofe storing. Do not squirt or pour oil into the inside mechanism because it may cause deformation.

SERVICE AGREEMENT AND LIMITED WARRANTY

IMPORTANT WARNING:

In case of a malfunction with your firearm, after taking safety precautions, you can contact our authorized dealer for detailed assistance regarding the malfunction.

IMPORTANT WARNING:

If the malfunction in your firearm is not resolved, you can call our factory technical service at +90 544 672 97 95 for remote assistance or e-mail us at info@sierradefense.com.

IMPORTANT WARNING:

If, after contacting our factory technical service, a malfunction occurs that requires the product to be sent for service, please fill out the form according to the instructions given by our technical service representative and send it to the specified address using our company's Aras Kargo contract code. Include a copy of the official warranty certificate filled out and stamped by our authorized dealer, along with copies of the invoice and license. Shipping costs for products sent to the factory technical service under warranty will be covered by our company if sent with our contracted shipping company. (Shipping costs for out-of-warranty products will be covered by the user. For products still under warranty, shipping costs for malfunctions caused by the customer are the responsibility of the user.)













When shooting or hunting always acquire the permission of the landowner. Respect the land. Do not litter, use gates when possible, leave closed gates closed. Drive vehicles only where advance permission has been granted and always express gratitude for use of another persons land. Offer your labor or game as repayment for the privilege of use. Remember you are helping develop a reputation for all sportsmen/sportswomen.



sierradefenseusa.com

